





WARNING: The air suspension system is under pressure (up to 10 bar, or 150 lbf/in). Verify pressure has been relieved and disconnect power to the air suspension system prior to disassembly. Do not allow dirt or grease to enter the system. Always wear standard hand, ear, and eye protection when servicing the air suspension system.

KIT CONTAINS:

PARTS LIST		
P/N	QTY	DESCRIPTION
21-7669	1	Di.Pa. Sport REMANUFACTURED FRONT LEFT AIR STRUT
21-7670	1	INSTRUCTION PACKET



GENERAL INFORMATION:

- Not to be stored below 5°F (-15°C) or above 122°F (50°C).
- Avoid damage to air lines and cables.
- Removal and installation is only to be performed by fully qualified personnel.
- Use car manufacturer's diagnostic software.

CAUTION: Damage to the vehicle and air suspension system can be incurred if work is carried out in a manner other than specified in the instructions or in a different sequence.



To avoid the possibility of short circuits while working with electric components consult your owner's manual on how to disconnect your battery.



Consult your vehicle owner's manual, service manual, or car dealer for the correct jacking points on your vehicle and for additional care, safety and maintenance instructions. Under no circumstances should any work be completed underneath the vehicle if it is not adequately supported, as serious injuries and death can occur.

AIR STRUT REMOVAL

- 1. SET STEERING TO STRAIGHT AHEAD.
- 2. LIFT VEHICLE AND REMOVE WHEEL. (FIGURE 1)



FIGURE 1



3. LOCATE AND REMOVE THE SEAL AND PLASTIC COVER IN THE ENGINE COMPARTMENT. (FIGURE 2)





FIGURE 2

4. LOCATE AND REMOVE THE TREE (3) TOP MOUNTING BOLTS. (FIGURE 3)





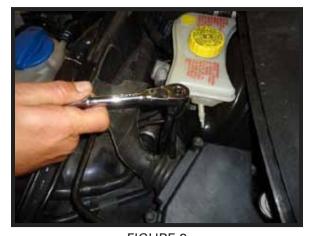


FIGURE 3



5. LOCATE AND REMOVE THE AIR LINE. REMOVETHE AIR LINE FITTING FROM THE AIR HOSE AND DISCARD. (FIGURE 4)



FIGURE 4

6. LOCATE AND DISCONNECT THE ELECTRICAL PLUG FROM THE BOTTOM OF THE SHOCK. (FIGURE 5)



FIGURE 5

7. LOOSEN AND REMOVE THE PINCH BOLT HOLDING THE UPPER CONTROL ARMS TO THE SPINDLE ASSEMBLY. (FIGURE 6)





FIGURE 6



8. LOOSEN AND REMOVE THE LOWER MOUNTING NUT AND BOLT. (FIGURE 7)





FIGURE 7

9. REMOVE THE AIR STRUT FROM THE VEHICLE. (FIGURE 8)



FIGURE 8



10. REMOVE THE FOUR (4) TOP MOUNTING NUTS TO SEPARATE THE AIR STRUT FROM THE TOP MOUNT ASSEMBLY. (FIGURE 9)





FIGURE 9

10. REMOVAL COMPLETE.

AIR STRUT INSTALLATION



Tighten all nuts and bolts to manufacturer's specifications during the installation process.



Do not remove the air fitting from the air spring. Doing so may cause damage and/or void warranty. Remove the white shipping pin from the new air fitting and insert the air line until fully seated.

INSTALLATION IS IN THE REVERSE ORDER OF AIR STRUT REMOVAL.