





WARNING: The air suspension system is under pressure (up to 10 bar, or 150 lbf/in). Verify pressure has been relieved and disconnect power to the air suspension system prior to disassembly. Do not allow dirt or grease to enter the system. Always wear standard hand, ear, and eye protection when servicing the air suspension system.

1

REV 1 12/12/2013



GENERAL INFORMATION:

- Not to be stored below 5°F (-15°C) or above 122°F (50°C).
- Avoid damage to air lines and cables.
- Removal and installation is only to be performed by fully qualified personnel.
- Use car manufacturer's diagnostic software.

CAUTION: Damage to the vehicle and air suspension system can be incurred if work is carried out in a manner other than specified in the instructions or in a different sequence.



To avoid the possibility of short circuits while working with electric components consult your owner's manual on how to disconnect your battery.



Consult your vehicle owner's manual, service manual, or car dealer for the correct jacking points on your vehicle and for additional care, safety and maintenance instructions. Under no circumstances should any work be completed underneath the vehicle if it is not adequately supported, as serious injuries and death can occur.



Put vehicle in netural. This will allow the stabilizer bar link to align with rear hub.

AIR STRUT REMOVAL

- 1. RAISE VEHICLE.
- 2. REMOVE REAR WHEEL.
- 3. REMOVE THE LUGGAGE COMPARTMENT SIDE TRIM TO EXPOSE THE TOP SIDES OF THE AIR SPRING. (FIGURE A)



FIGURE A




4. DISCONNECT THE AIR LINE FROM THE CHECK VALVE TO DEFLATE THE AIR STRUT. REMOVE THE AIR LINE FITTING FROM THE AIR HOSE AND DISCARD. (FIGURE B)



FIGURE B

5. DISCONNECTTHE ELECTRICAL CONNECTOR FROM THE TOP OF THE AIR STRUT (PUSH ON THE SIDES OF THE CONNECTOR TO RELEASE. (FIGURE C)

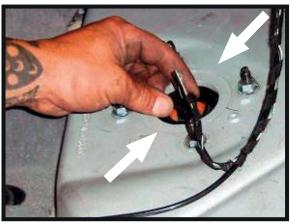



6. REMOVE THE FOUR (4) AIR STRUT MOUNTING NUTS. (FIGURE D)



FIGURE D

3 SSAS02711N

REV 1 12/12/2013



7. DETACH THE REAR TIE ROD. (FIGURE E)



FIGURE E

8. REMOVE THE LOWER AIR STRUT MOUNTING BOLT. (FIGURE F)



FIGURE F



9. REMOVE AIR STRUT. (FIGURE G)

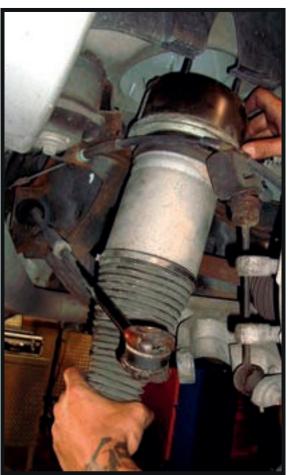


FIGURE G

10. REMOVAL COMPLETE.

AIR STRUT INSTALLATION



Tighten all nuts and bolts to manufacturer's specifications during the installation process.



5

Do not remove the air fitting from the air strut. Doing so may cause damage and/or void warranty. Remove the white shipping pin from the new air fitting and insert the air line until fully seated.

1. INSTALLATION IS IN REVERSE ORDER OF AIR STRUT REMOVAL.