



SSA015N
Di.Pa. Sport
REAR AIR SPRING
JEEP GRAND CHEROKEE (WK2)



WARNING: The air suspension system is under pressure (up to 10 bar, or 150 lbf/in). Verify pressure has been relieved and disconnect power to the air suspension system prior to disassembly. Do not allow dirt or grease to enter the system. Always wear standard hand, ear, and eye protection when servicing the air suspension system.



SSA015N
Di.Pa. Sport
REAR AIR SPRING
JEEP GRAND CHEROKEE (WK2)

GENERAL INFORMATION:

- Not to be stored below 5 °F (-15 °C) or above 122 °F (50 °C).
- Avoid damage to air lines and cables.
- Removal and installation is only to be performed by fully qualified personnel.
- Use car manufacturer's diagnostic software.

CAUTION: *Damage to the vehicle and air suspension system can be incurred if work is carried out in a manner other than specified in the instructions or in a different sequence.*



To avoid the possibility of short circuits while working with electric components consult your owner's manual on how to disconnect your battery.



Consult your vehicle owner's manual, service manual, or car dealer for the correct jacking points on your vehicle and for additional care, safety and maintenance instructions. Under no circumstances should any work be completed underneath the vehicle if it is not adequately supported, as serious injuries and death can occur.

AIR SPRING REMOVAL

1. SET STEERING TO STRAIGHT AHEAD.
2. RAISE VEHICLE.
3. REMOVE APPLICABLE REAR WHEEL. (FIGURE 1)



FIGURE 1



SSA015N
Di.Pa. Sport
REAR AIR SPRING
JEEP GRAND CHEROKEE (WK2)

4. DISCONNECT THE AIR LINE FROM THE FITTING AT THE TOP OF THE AIR SPRING. (FIGURES 2, 3)

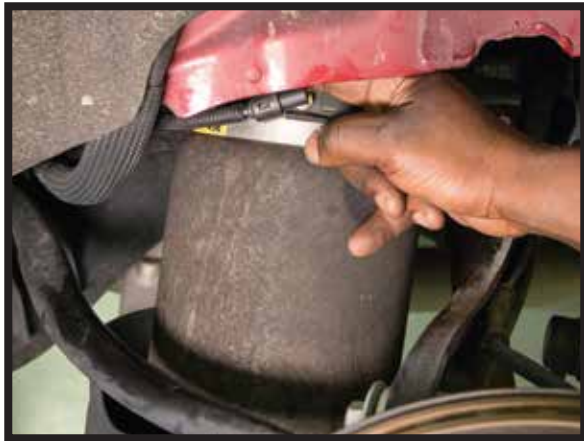


FIGURE 2



FIGURE 3

5. WITH THE AIR LINE DISCONNECTED, PRESS DOWN TO COLLAPSE THE AIR SPRING AND THEN REMOVE FROM THE VEHICLE. (FIGURES 4, 5)



FIGURE 4



FIGURE 5



SSA015N
Di.Pa. Sport
REAR AIR SPRING
JEEP GRAND CHEROKEE (WK2)

AIR SPRING INSTALLATION

NOTE: INSTALL ASSEMBLY AS RECEIVED WITH RUBBER ISOLATOR AFFIXED TO TOP MOUNT.

1. PRESS DOWN TO COLLAPSE THE AIR SPRING TO INSTALL ONTO VEHICLE, WHILE MAKING SURE THE SPRING IS PROPERLY ORIENTED. (FIGURES 6, 7)



FIGURE 6



FIGURE 7

2. CONNECT THE AIR LINE TO THE AIR FITTING AT THE TOP OF THE AIR SPRING. (FIGURES 8, 9)



FIGURE 8



FIGURE 9

3. RE-INSTALL APPLICABLE REAR WHEEL.
4. LOWER VEHICLE.
5. INSTALLATION COMPLETE .